


3-12. HI-FI AUDIO PACK SCHEMATIC DIAGRAM

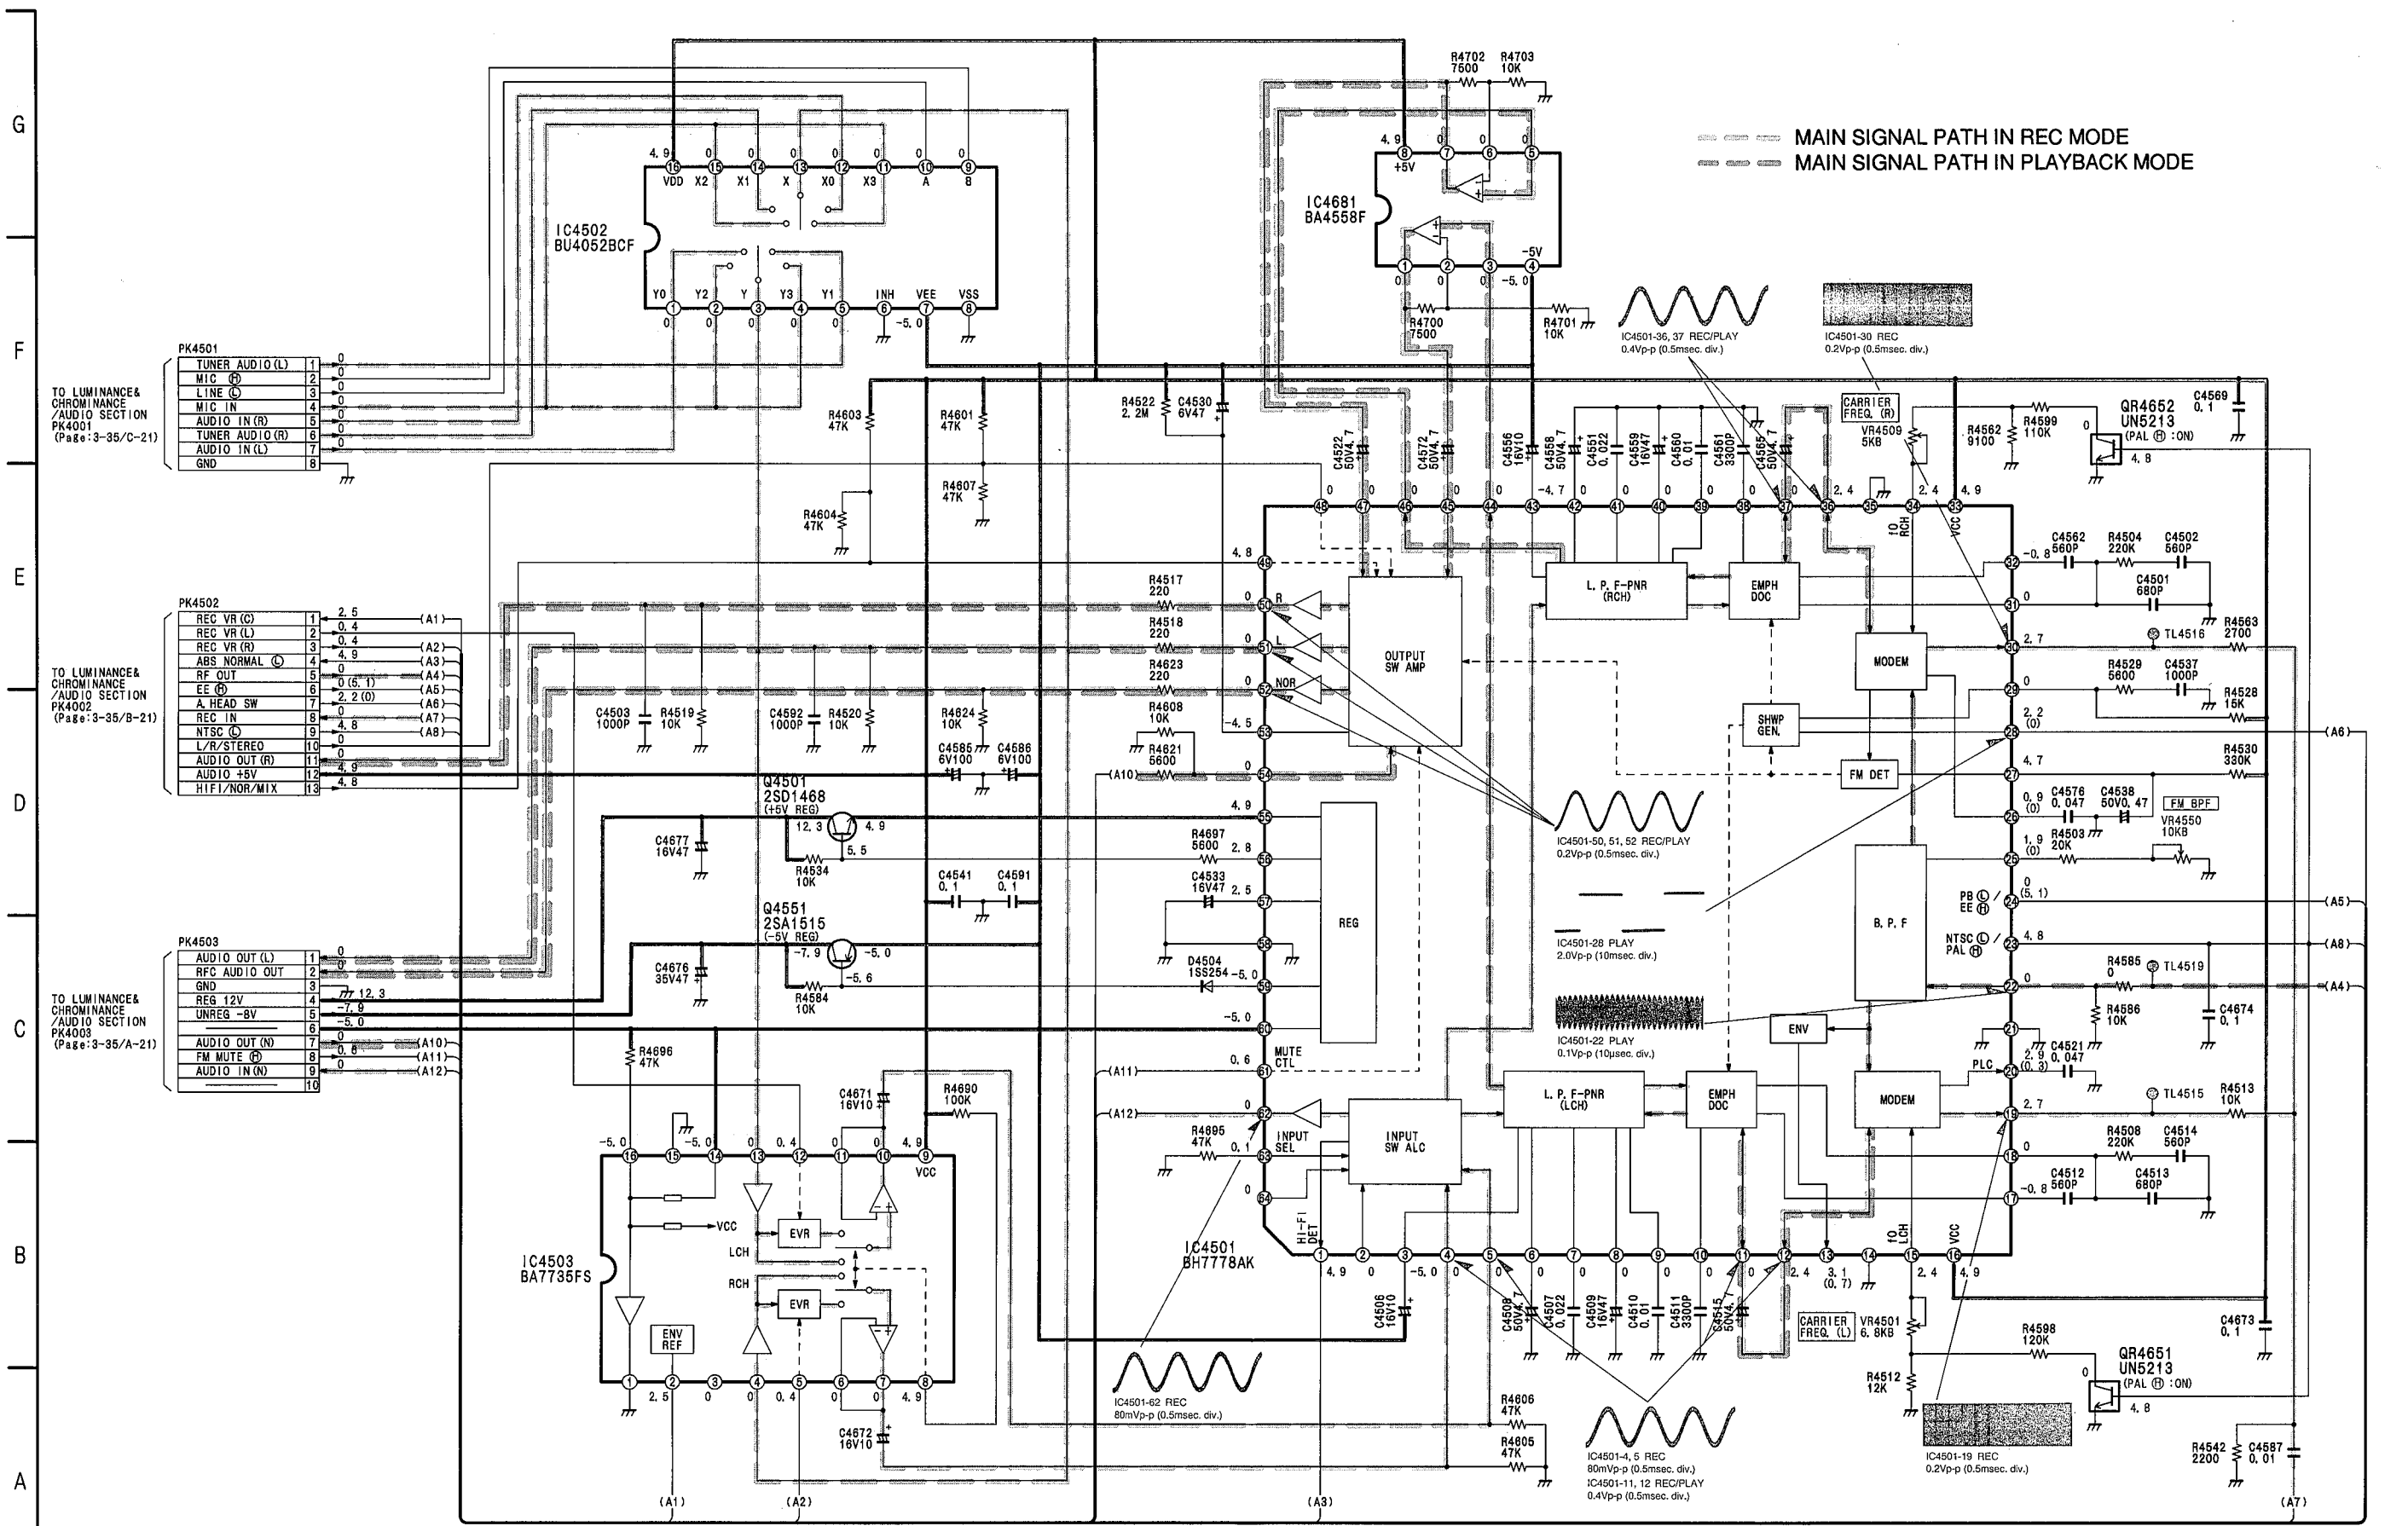

TO LUMINANCE & CHROMINANCE /AUDIO SECTION PK4001 (Page: 3-35/C-21)

TO LUMINANCE & CHROMINANCE /AUDIO SECTION PK4002 (Page: 3-35/B-21)

TO LUMINANCE & CHROMINANCE /AUDIO SECTION PK4003 (Page: 3-35/A-21)

| PK4501 | | |
|-----------------|---|---|
| TUNER AUDIO (L) | 1 | 0 |
| MIC (C) | 2 | 0 |
| LINE (C) | 3 | 0 |
| MIC IN | 4 | 0 |
| AUDIO IN (R) | 5 | 0 |
| TUNER AUDIO (R) | 6 | 0 |
| AUDIO IN (L) | 7 | 0 |
| GND | 8 | |

| PK4502 | | |
|----------------|----|--------------|
| REC VR (C) | 1 | 2.5 (A1) |
| REC VR (L) | 2 | 0.4 |
| REC VR (R) | 3 | 0.4 |
| ABS NORMAL (C) | 4 | 4.9 (A3) |
| RF OUT | 5 | 0 |
| EE (C) | 6 | 0 (5.1) (A5) |
| A. HEAD SW | 7 | 2.2 (0) (A6) |
| REC IN | 8 | 0 |
| NTSC (C) | 9 | 4.8 (A7) |
| L/R/STEREO | 10 | 0 |
| AUDIO OUT (R) | 11 | 0 |
| AUDIO +5V | 12 | 4.9 |
| HIFI/NOR/MIX | 13 | 4.8 |

| PK4503 | | |
|---------------|----|----------|
| AUDIO OUT (L) | 1 | 0 |
| RFC AUDIO OUT | 2 | 0 |
| GND | 3 | 0 |
| REG 12V | 4 | 7.7 12.3 |
| UNREG -8V | 5 | -7.9 |
| GND | 6 | 0 |
| AUDIO OUT (R) | 7 | 0 |
| FM MUTE (C) | 8 | 0 |
| AUDIO IN (N) | 9 | 0 |
| GND | 10 | 0 |

NOTE: THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS () ON THIS DIAGRAM IS RECORD MODE WITH PAL COLOUR SIGNAL. (S-VHS:SP MODE) LINE IN SIGNAL LEVEL...-10dB 1kHz

THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ON THIS DIAGRAM IS PLAYBACK MODE WITH PAL COLOUR SIGNAL. (S-VHS:SP MODE) LINE IN SIGNAL LEVEL...-10dB 1kHz

NOTE: DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING. WHEN YOU ORDER A PART, PLEASE REFER TO PARTS LIST.